

BROKK UPTIME™

Wear and Spare Parts

Original Brokk spare parts and consumables are designed for optimal performance to ensure longer life and maximum reliability for your demolition robot. We recommend the tailor made Brokk Uptime parts packages to keep your demolition robot advantages for a long period of time.

Contact your local dealer for more information.

Maintenance and Wear Package

We know the importance of keeping your machine up and running and our recommendation is that all should have the **Maintenance and Wear Package**. The **Maintenance and Wear Package** include the parts you normally need for your daily and weekly maintenance of the machine.

Package for electrical driven machines:

Air filter

Return filter

Grease

Rubber shoe outrigger

Wedge quick coupling

Quick couplings

Hoses for outrigger cylinder

Hoses for cylinder 4

Rubber damask control lever

Switches on control unit

Sealing cap switches control unit

Fuses

Grease nipples

Package for diesel driven machines:

Air filter

Return filter

Grease

Rubber shoe outrigger

Wedge quick coupling

Lock pin quick coupling

Quick couplings

Hoses for outrigger cylinder

Hoses for cylinder 4

Rubber damask control lever

Switches on control unit

Sealing cap switches control unit

Fuses

Grease nipples

Fuel filter

Oil filters

Fan belts

Critical Parts Package

We can highly recommend the **Critical Parts Package** especially if you're working in a critical application or with limited local service available. The parts included in the **Critical Part Package** will ensure the machine uptime and includes parts that are the most exposed to damage or contamination and other key parts to minimize the downtime.

Package for electrical driven machines:

- Pilot valve to main valve
- Other critical valves included in main valve
- Coupling between motor and pump*
- Critical parts included in quick hitch
- Arm cylinder
- Critical parts included in shafts
- Nipple and sealing for grease tension*
- Outrigger cylinder
- Check valve for outrigger cylinder
- Control lever
- Stop switch on control unit
- Control cable
- Rear outer stop switch*
- Reversing switch
- Relays
- Power cable connected to electrical cabinet
- Contact and over load relay (only Brokk 60)

Package for diesel driven machines:

- Pilot valve to main valve
- Other critical valves included in main valve
- Critical parts included in quick hitch
- Arm cylinder
- Critical parts included in shafts
- Nipple and sealing for grease tension**
- Outrigger cylinder
- Check valve for outrigger cylinder
- Control lever control unit
- Stop switch on control unit
- Control cable
- Rear outer stop switch**
- Vibration isolator diesel engine
- Glow relay diesel engine***

* not included to Brokk 60 and Brokk 110

** not included to Brokk 120D

*** not included to Kohler engine

BHB Maintenance and Wear Package

Brokk breakers are made for maximising your efficiency and the **BHB Maintenance and Wear Package** provides you with the parts normally needed for the daily and weekly maintenance and operation of the breaker.

BHB Maintenance and Wear Package:

- Chisel paste
- Seal kit
- Service kit lower part hammer
- Accumulator repair kit
- Hydraulic hoses to hammer

Note: The parts packages do not include parts and consumables required for service intervals that should be carried out by an authorized service technician.